


HOME DECORATORS C O L L E C T I O N

BF-25147 CLOSED WALL MOUNTED STORAGE 34"H×21"W×8"D

INV#16070







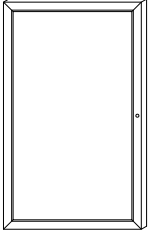
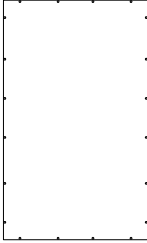




ASSEMBLY INSTRUCTIONS
















Made In China

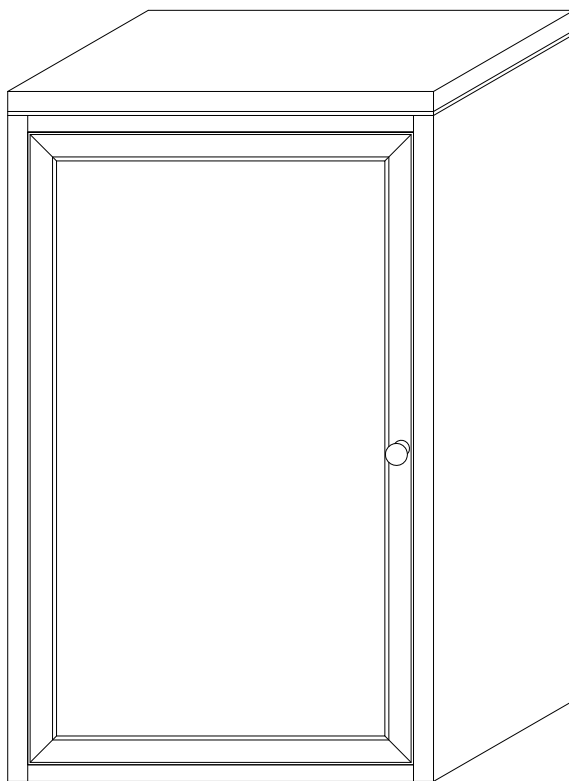

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.



IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST		
A  TOP PANEL-1PC	B  LEFT SIDE PANEL-1PC	C  RIGHT SIDE PANEL-1PC
D  BOTTOM PANEL-1PC	E  ADORNING PANEL-1PC	F  SHELVES-4PCS
G  DOOR-1PC	H  BACK PANEL-1PC	I  CAM-TOOL-1PC
J  CAM-BOLTS-8PCS	K  CAM-LOCKS-8PCS	L 7mm × 5/8"  SCREWS-24PCS

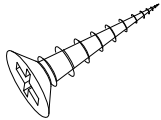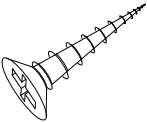M $6\text{mm} \times 5/8''$  SCREWS-5PCS	N  SHEET IRONS-2PCS	O $8\text{mm} \times 1-1/2''$  SCREWS-5PCS
P  GECKOS-5PCS	Q $8\text{mm} \times 1''$  SCREWS-3PCS	R  FEMALE MAGNETS-2PCS
S $5\text{mm} \times 1/2''$  SCREWS-2PCS	T  KNOB-1PC	U $8\text{mm} \times 5/8''$  SCREW-1PC
V  SHELF SUPPORTS-16PCS	W  MAGNETS-2PCS	Y  HINGES-2PCS
Z $6\text{mm} \times 1/2''$  SCREWS-12PCS	A1  EVA PADS-2PCS	B1  CAM-LOCK CAPS-4PCS




NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

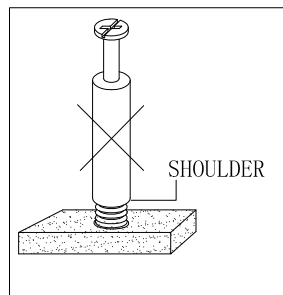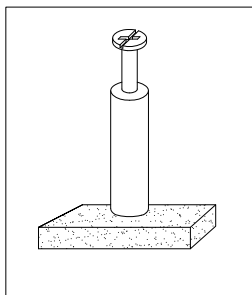


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

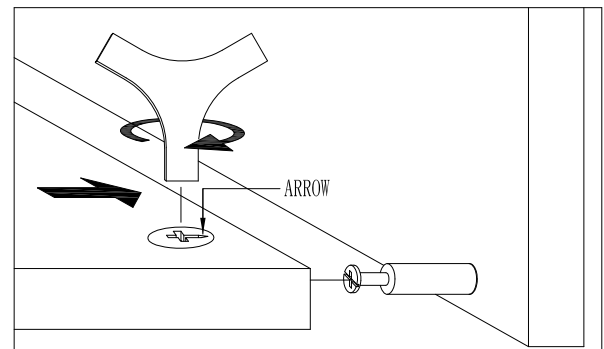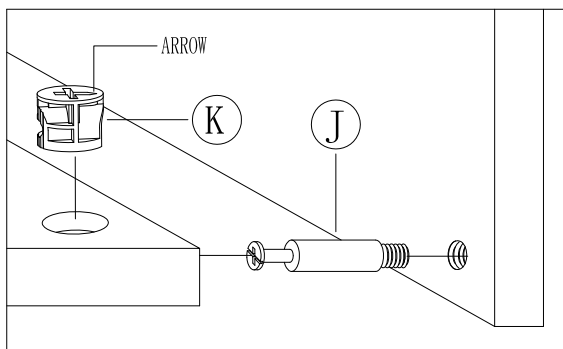


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

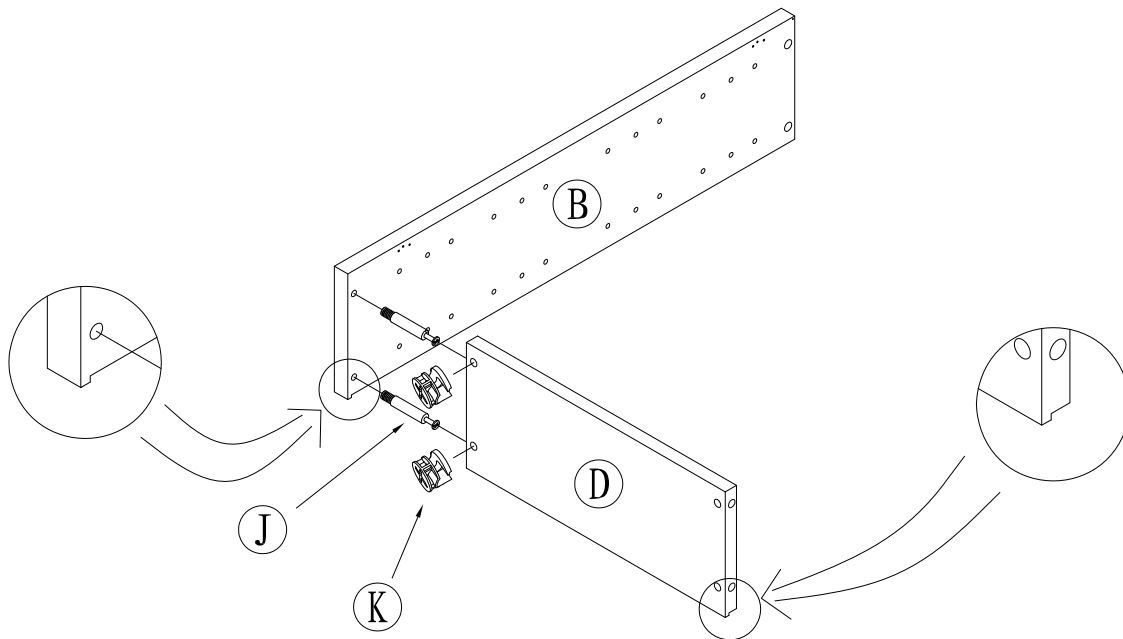


1). ASSEMBLE THE LEFT SIDE PANEL (B).

- ROTATE 2 CAM-BOLTS(J) INTO THE HOLES IN THE LEFT SIDE PANEL (B).
- PLACE CAM-BOLTS(J) INTO THE HOLES IN THE BOTTOM PANEL (D) AND ATTACH USING 2 CAM-LOCKS (K).

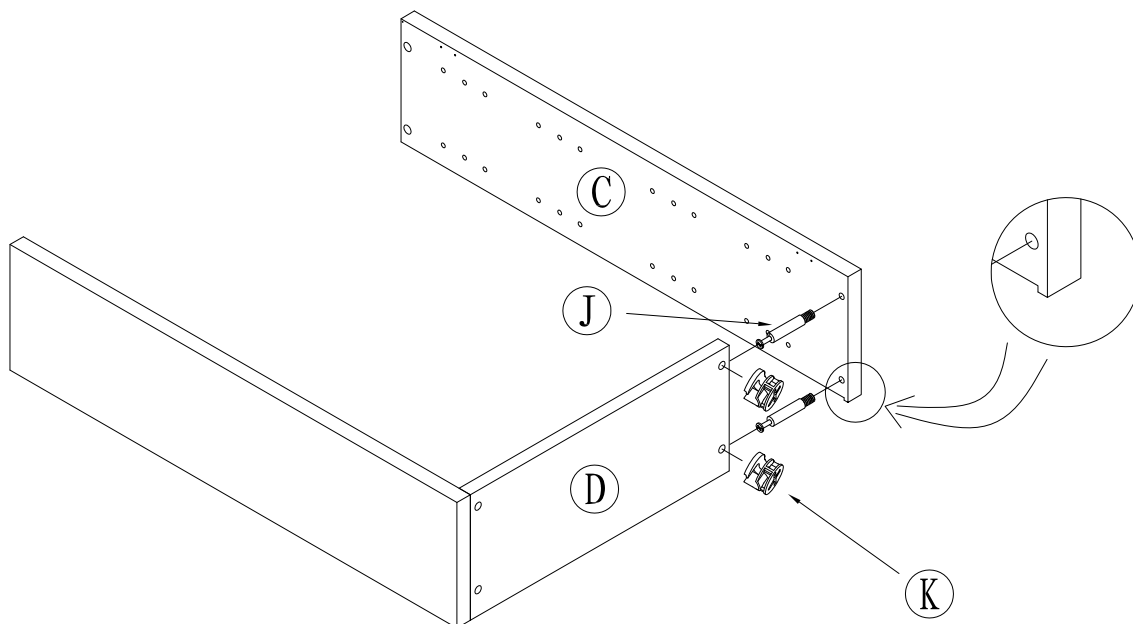


2). ASSEMBLE THE RIGHT SIDE PANEL (C).

- ROTATE 2 CAM-BOLTS(J) INTO THE HOLES IN THE RIGHT SIDE PANEL (C).
- PLACE CAM-BOLTS(J) INTO THE HOLES IN THE BOTTOM PANEL (D) AND ATTACH USING 2 CAM-LOCKS (K).

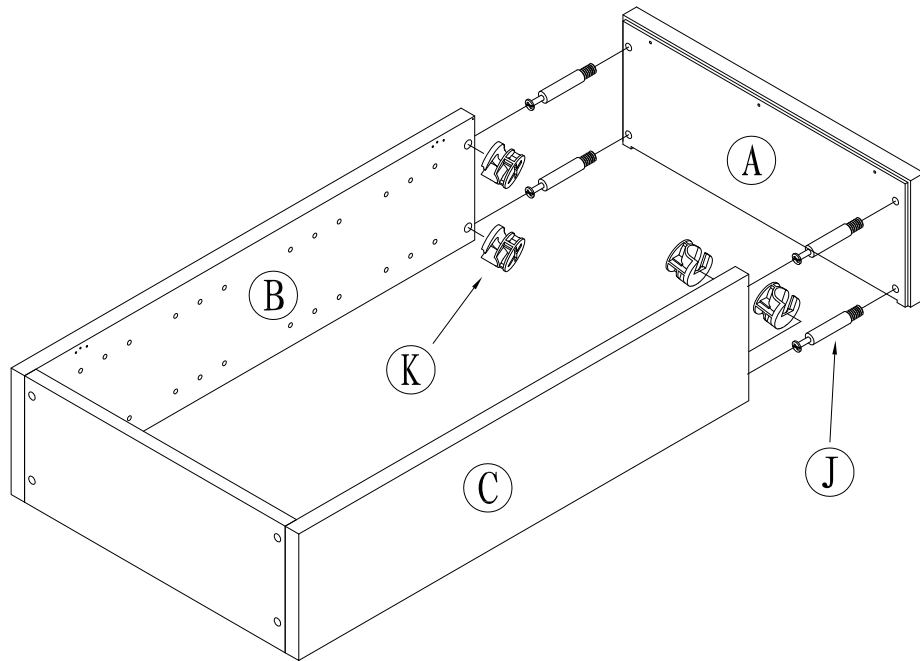


3). ASSEMBLE THE TOP PANEL(A).

- ROTATE 4 CAM-BOLTS(J) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE CAM-BOLTS(J) INTO THE HOLES IN THE SIDE PANEL(B/C) AND ATTACH USING 4 CAM-LOCKS(K).

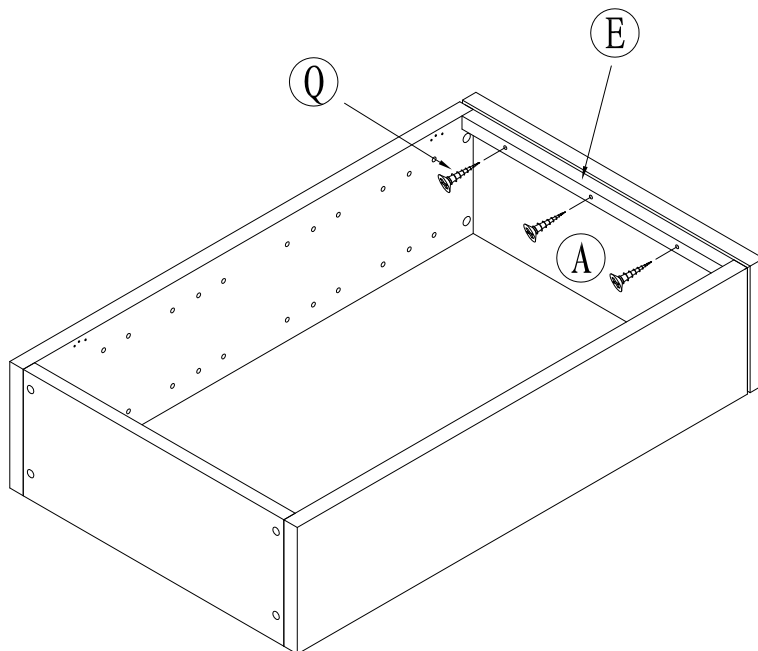


4). ASSEMBLE THE ADORNING PANEL(E).

- ATTACH THE ADORNING PANEL(E) TO TOP PANEL(A) USING 3 SCREWS(Q).

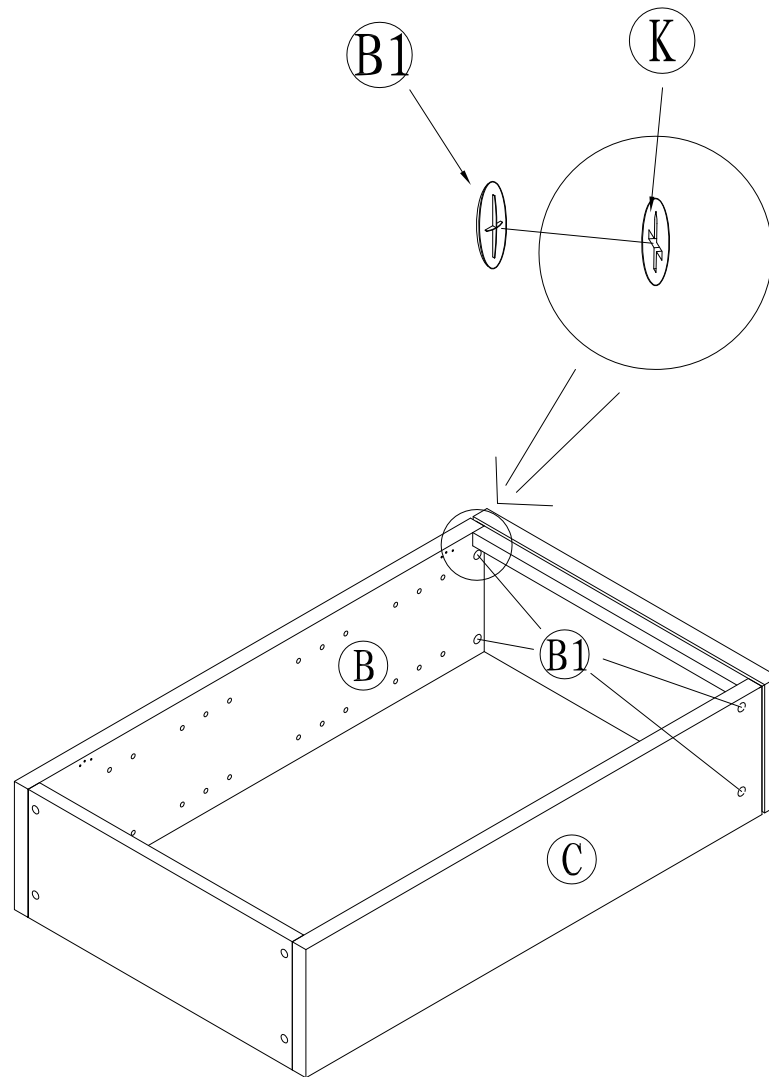


5). ASSEMBLE THE CAM-LOCK CAPS (B1).

- ATTACH THE 4 CAM-LOCK CAPS (B1) ONTO THE 4 CAM-LOCKS (K).

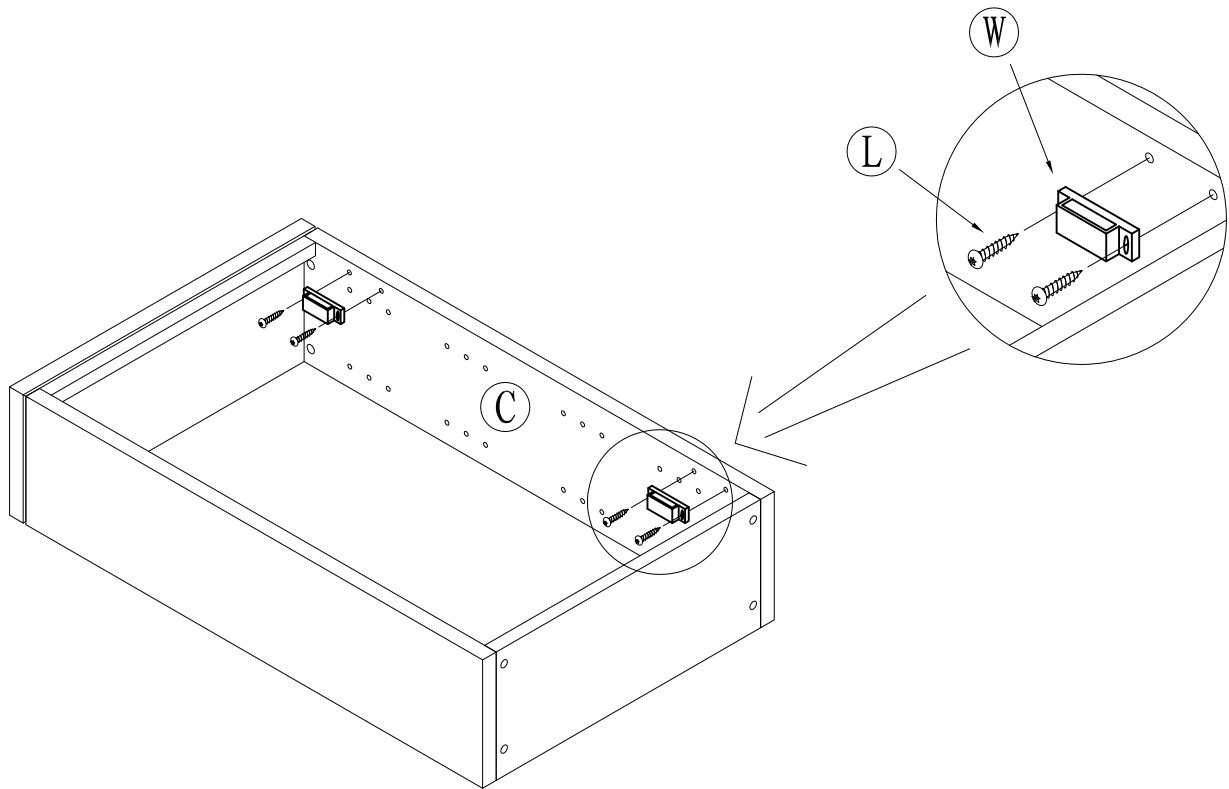


6). ASSEMBLE THE MAGNETS (W).

- ATTACH THE 2 MAGNETS (W) TO RIGHT SIDE PANEL (C) USING 4 SCREWS (L).

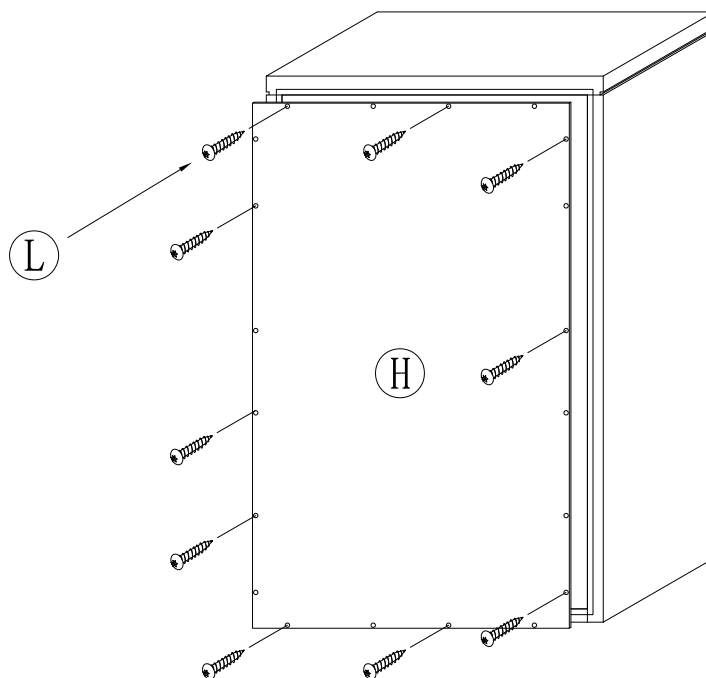


7). ASSEMBLE THE BACK PANEL (H).

- ATTACH THE BACK PANEL (H) USING 20 SCREWS (L).

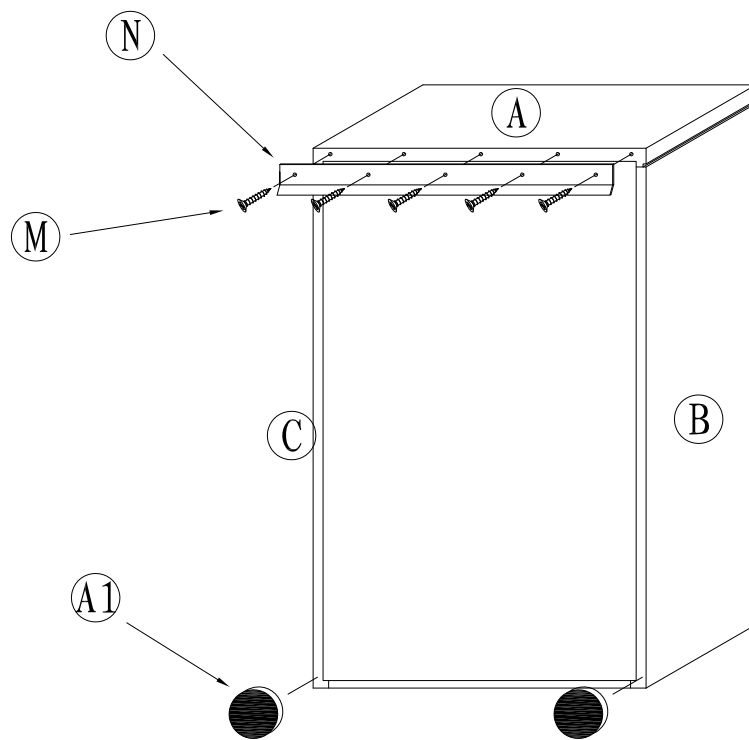


8). ASSEMBLE THE SHEETIRON(N).

- ATTACH THE SHEETIRON(N) TO TOP PANEL (A) USING 5 SCREWS(M).
- ATTACH 2 EVA PADS(A1) TO SIDE PANEL (B/C).

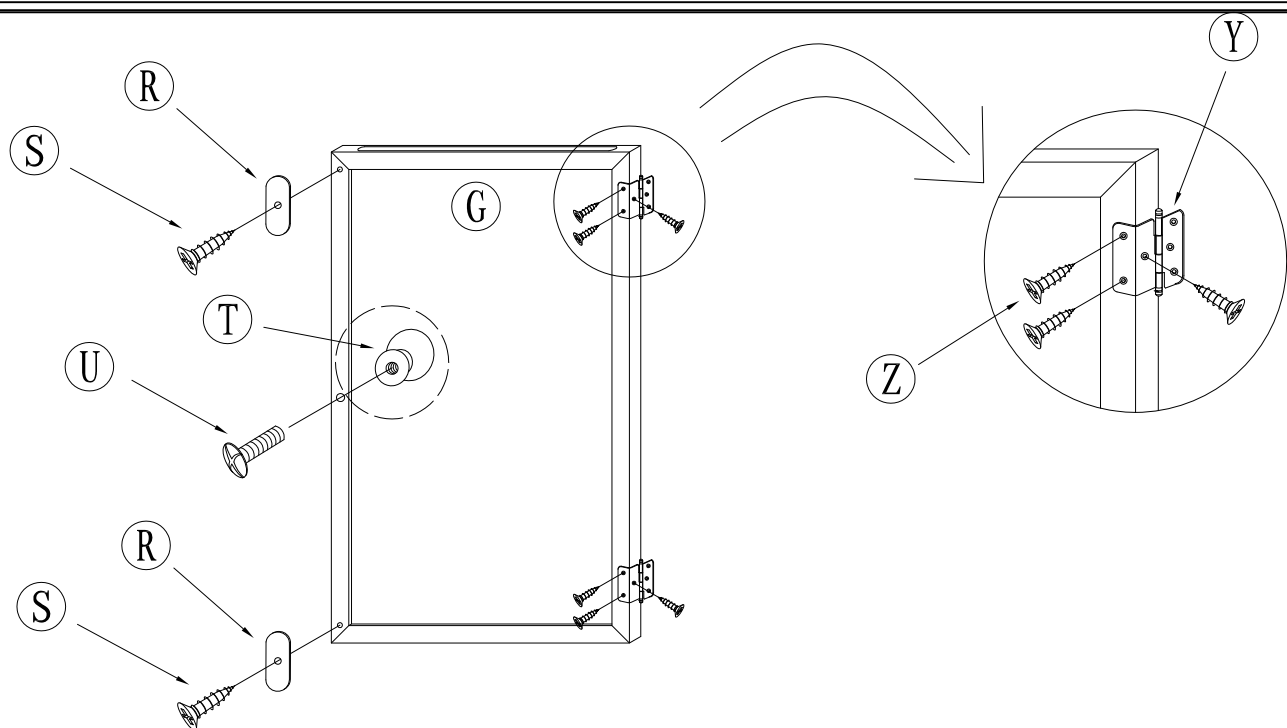


9). ASSEMBLE THE DOOR(G).

- ATTACH THE 2 FEMALE MAGNETS(R) TO DOOR(G) USING 2 SCREWS(S).
- ATTACH THE KNOB TO DOOR(G) USING 1 SCREW(U).
- ATTACH THE 2 HINGES(Y) TO DOOR(G) USING 6 SCREWS(Z).

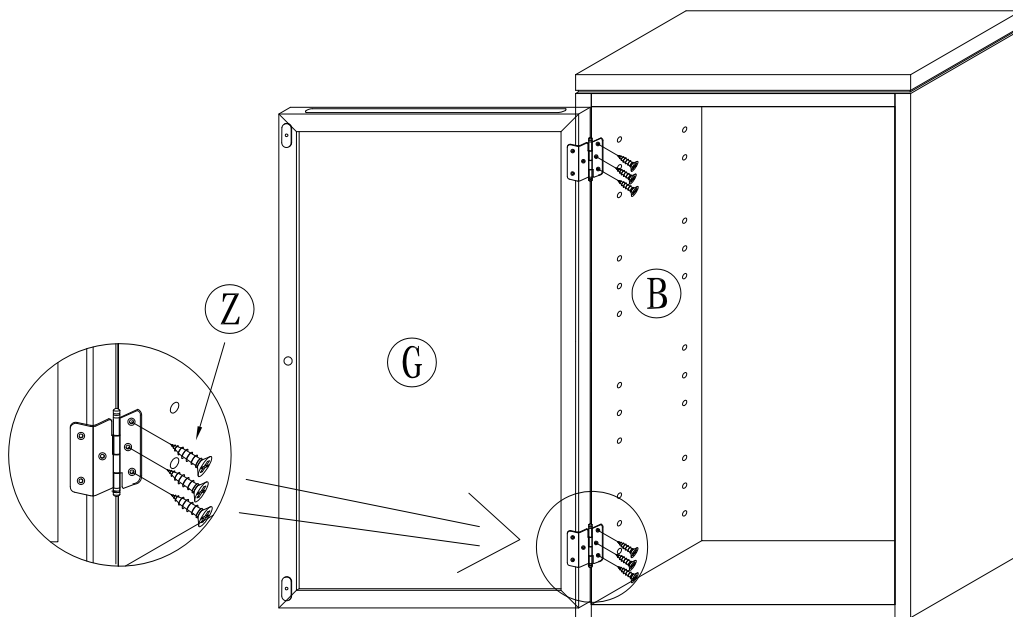


10). ASSEMBLE THE DOOR (G).

- ATTACH THE DOOR (G) TO LEFT SIDE PANEL (B) USING 6 SCREWS (Z).

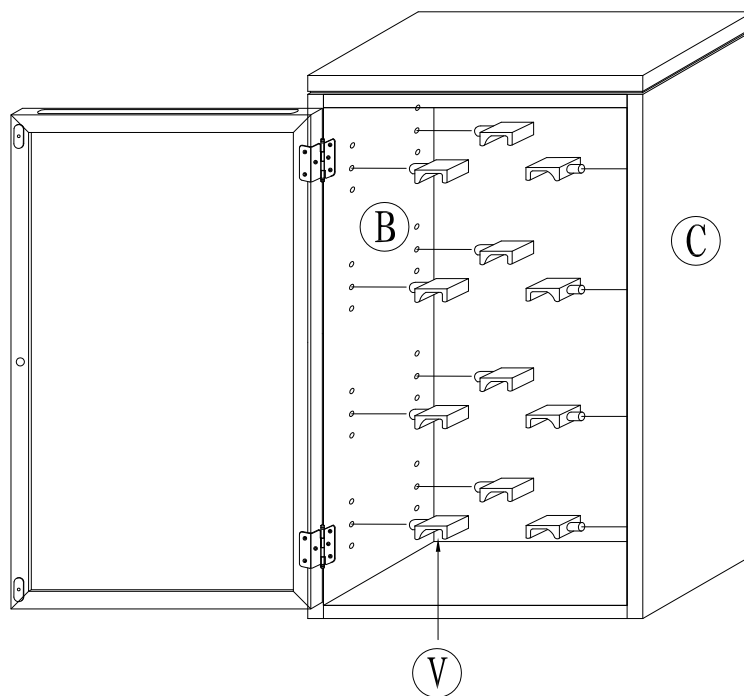




11). ASSEMBLE THE SHELF SUPPORTS (V).

- INSERT 16 SHELF SUPPORTS (V) INTO THE HOLES IN THE SIDE PANEL (B/C).

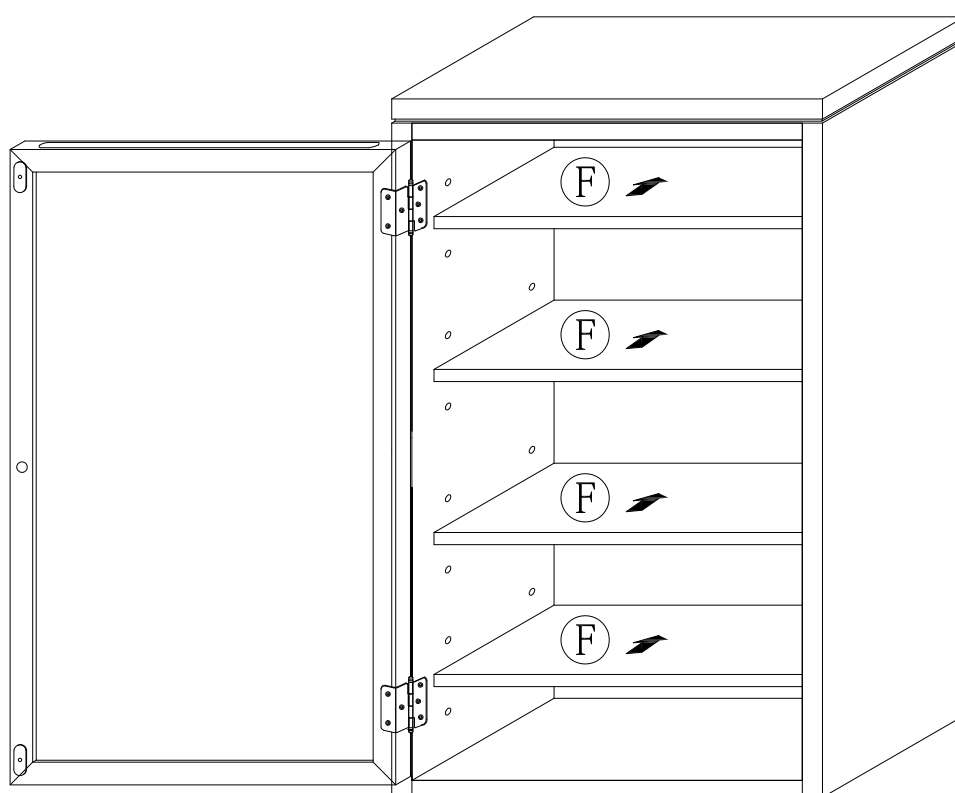

12). ASSEMBLE THE SHELVES (F).

- PLACE THE SHELVES (F) ONTO THE SHELF SUPPORTS (V).

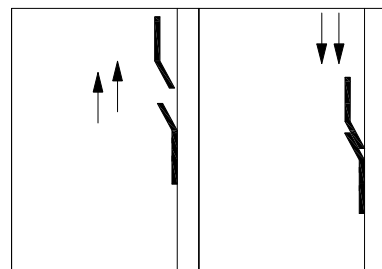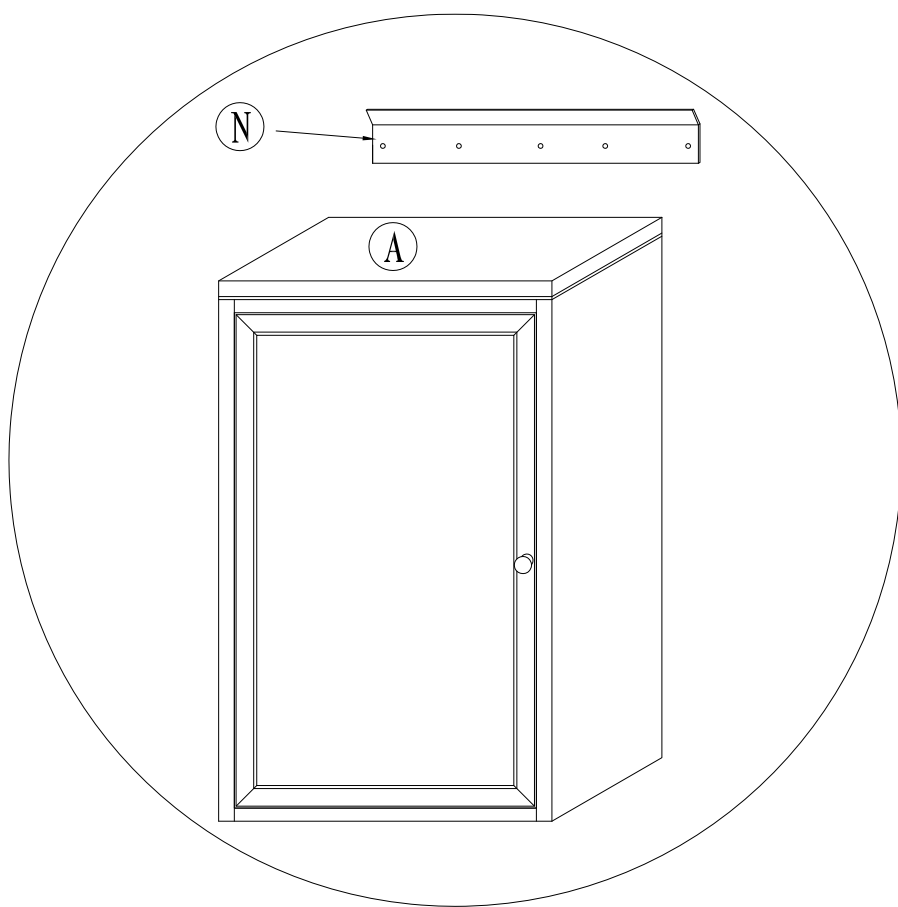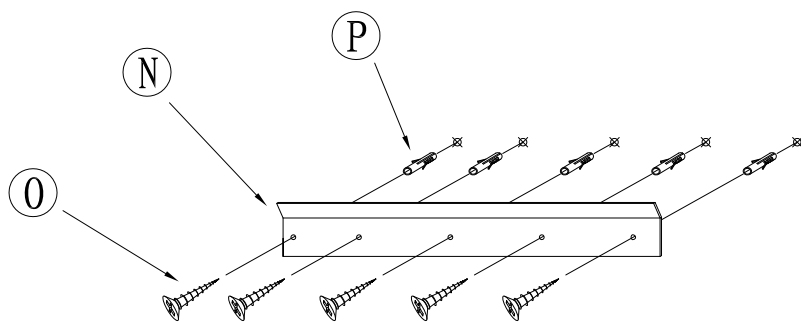

13). ASSEMBLE THE GECKOS (P).

- DRILL 5 HOLES INTO THE WALL, PLEASE REFER TO THE REAR BACK PANEL'S HOLE DISTANCE AND HEIGHT.
- TAP 5 GECKOS (P) INTO THE HOLES ON THE WALL. THEN ROTATE 5 SCREWS (O) INTO THE GECKOS (P).
- HANG THE CABINET ONTO THE SHEETIRON (N).